取付作業者用 / お客様用

AN250/AN400K7

ナックルバイザ

取付 / 取扱説明書

スズキ純正用品をお買いあげいただきありがとうございます。

本書は用品の取付け方法及び取扱の方法を説明しています。取付けの前に必ずお読みいただき，正しく取り付けてください。取付後，本書を必ずお客様に渡してください。

構成部品

取付時間： 0.4 H

ナックルバイザ



スペーサ

プレート

ボルト（6 × 20）

ワッシャ

スクリュ（6 × 80）

スクリュ（5 × 10）

ナット

取付 / 取扱説明書（本書）

本書の中で使用されている記号 ⚠警告，⚠注意，ｱﾄﾞﾊﾞｲｽ のところは，とくにしっかりお読みください。

⚠警告	**取扱いを誤った場合，死亡または重大な傷害を生じる可能性が想定される内容を示しています。**
⚠注意	**取扱いを誤った場合，傷害を負う可能性がある内容，または物的損害の発生が予想される内容を示しています。**
ｱﾄﾞﾊﾞｲｽ	**この部品のために守っていただきたいこと，および知っておくと便利なことを示しています。**

SGA スズキ純正用品

99021-05H31 TK 0707_0

⚠警告

●お客様ご自身で取付ける場合は，ご自身の知識･技量の範囲で行ってください。　難しいことはスズキ販売店にご相談ください。
●平坦な足場のしっかりした場所で，メインスタンドまたはサイドスタンドを立ててください。
●エンジン回転中および停止後しばらくの間は，マフラ，エンジンなどが熱くなっています。このとき触れるとやけどを負うおそれがあります。
●取付けを行うときは火気を近づけないでください。

⚠注意

●取付けはエンジンを停止し，キーを抜いた状態で行ってください。
●適切な工具を使用してください。
●本書に記載の取付位置以外の場所，または取付方法以外の方法で取付けた場合は，取付作業者の責任となります。
●適用機種以外には使用しないでください。適用機種以外に取付けられたものについては取付作業者の責任となります。

必要工具

⊕ ドライバ　　スパナ（10㎜）　　メガネレンチ（10㎜）





締付トルク

とくに指示のない個所は､右記を目安に締付けてください。



ネジ径 ㎜	締付トルク N･m
5	3
6	5
8	13
10	29

組立手順

アドバイス

説明文は，車両左側を示しています。右側も同じ作業を行ってください。

1. ナット及びボルトを取り外します。

アドバイス

・ナット及びボルトは再使用しません。

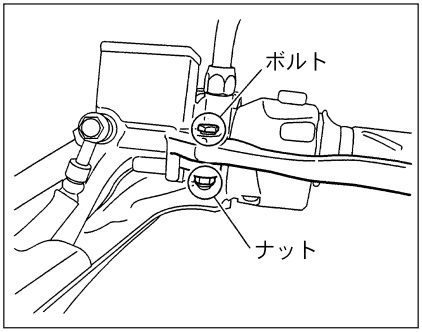

2. 梱包されているボルトとナットを取り付けます。

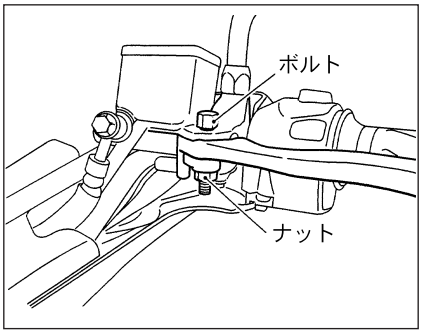

3. スクリュを外し，ハンドルバランサを取り外します。

アドバイス

・スクリュは再使用しません。

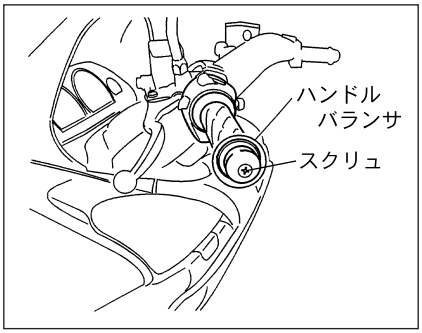

4. ナックルバイザに，梱包されているスクリュ（6×80），スペーサを右図の様に組み付けます。

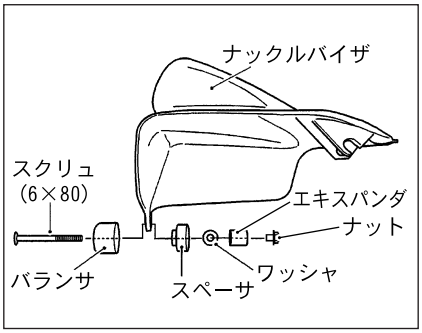

5. ナックルバイザをボルトにはめ込みます。
6. スクリュを締め，ナックルバイザを固定します。

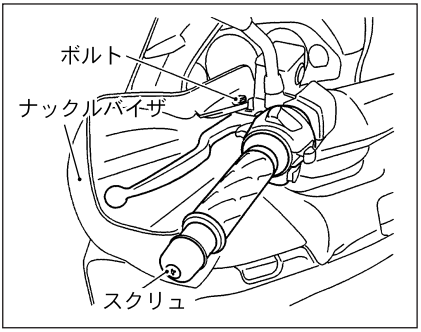

7. 梱包されているプレート及びスクリュ（5×10）でナックルバイザ上部を固定します。

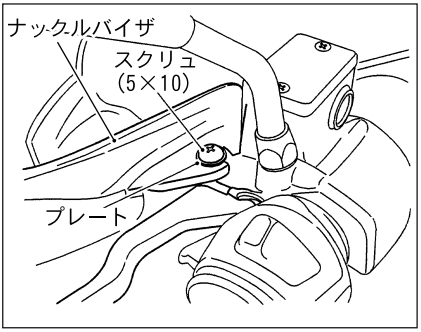

8. 梱包されているワッシャとナットでナックルバイザ下部を固定します。

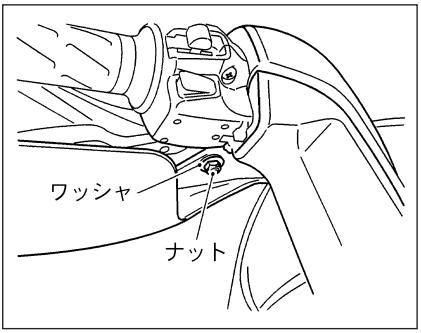

SUZUKI®

INSTALLATION INSTRUCTIONS

Description: **HAND GUARDS** Part Number: 57300-05850

Applications: AN250/400 Installation Time: 0.4 Hours

Contents

Ref.	Description	QTY
①	Guard (L)	1
②	Guard (R)	1
③	Spacer	2
④	Plate	2
⑤	Bolt (6 × 20)	2
⑥	Washer	2
⑦	Screw (6 × 80)	2
⑧	Screw (5 × 10)	2
⑨	Nut	2
⑩	Installation Instructions	1

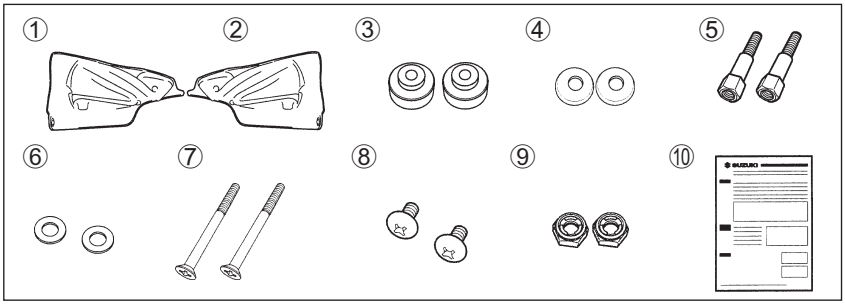

Tools Required

Ref.	Description
①	⊕ Driver
②	Spanner (10 mm)
③	Off-set wrench (10 mm)

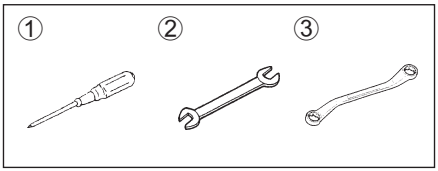

Important

⚠WARNING / CAUTION / *NOTE*

Please read this manual and follow its instructions carefully. To emphasize special information, the symbol and words **⚠WARNING, CAUTION** and ***NOTE*** have special meanings. Pay special attention to the messages highlighted by these signal words.

⚠ WARNING

Indicates potential hazard that could result in death or injury.

CAUTION

Indicates potential hazard that could result in vehicle damage.

NOTE: Indicates special information to make maintenance easier or instructions clearer.

SUZUKI®

Precautions for Installa-

1. Check that the kit has all the parts as listed in the first page.
2. Check each part in the kit for scratches or any form of damage.
3. Park the motorcycle in a level place on its center stand.
4. Remove the ignition key from the switch and store it in a safe place.
5. Protect any items removed or to be installed from scratches by placing them on a soft cloth first before putting them on the ground.
6. Use care not to cause any damage to the body of the motorcycle during installation of the accessory.

Tightening Torque

Tighten bolts to the torque indicated in the right table as standard value unless otherwise explicitly specified.

Diameter (mm)	Tightening Torque		
	N·m	kgf-m	lb-ft
5	3.0	0.3	2.0
6	5.5	0.55	4.0
8	13.0	1.3	9.5
10	29.0	2.9	21.0

Installa-

NOTE: *The explanation is given for the operation on the left side of the motorcycle.*
Carry out the identical operation for the right side also.

1. Remove the lever pivot bolt and nut.

NOTE: *Disuse the removed bolt and nut.*

2. Tighten the bolt and nut.

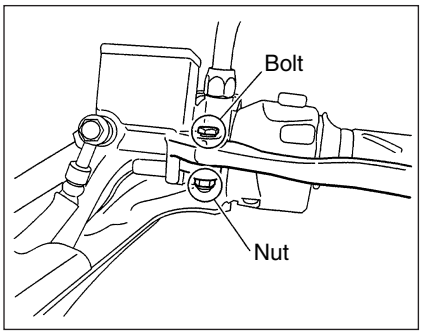

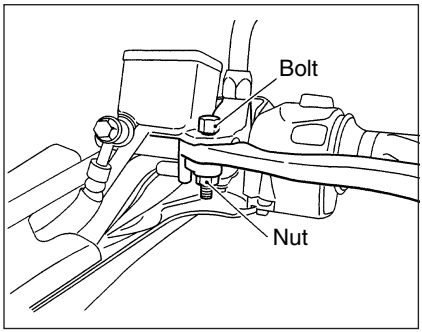

SUZUKI ®

3. Remove the handlebar balancer.

NOTE: *Disuse the removed screw.*

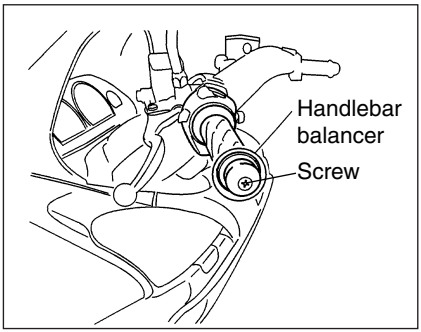

4. Install the screw (6 × 80) and spacer to the handguard.

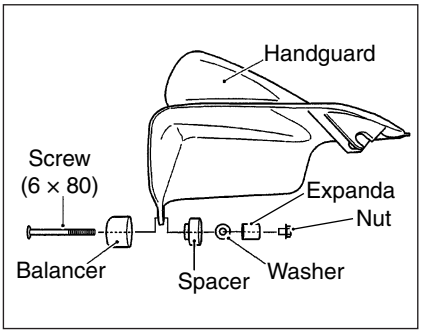

5. Insert the handguard into the bolt.
6. Tighten the screw to the handguard to the specified torque.

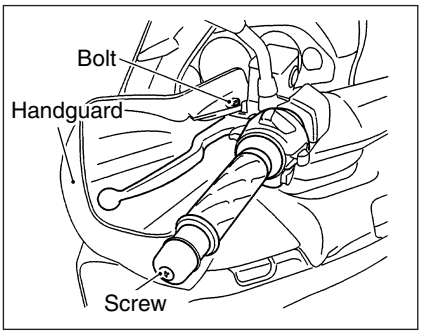

7. Install the plate on top of the handguard and tighten the screw (5 × 10), washer and nut to the specified torque.

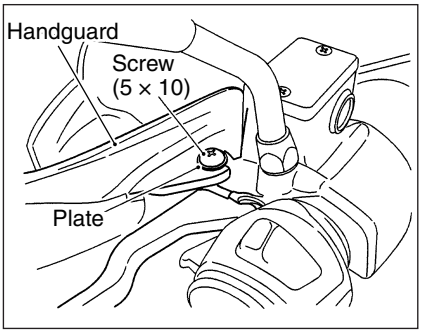

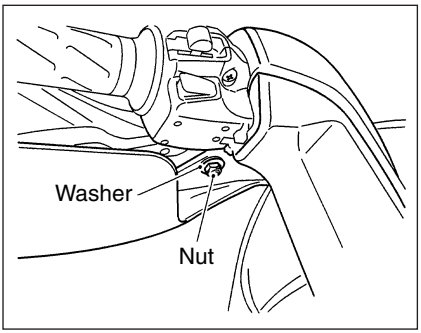
Washer
Nut